


## WITHDRAWING A DRIVER CARD



To withdraw a driver card, first make sure your vehicle is stationary.



Then, press and hold the driver or co-driver button.

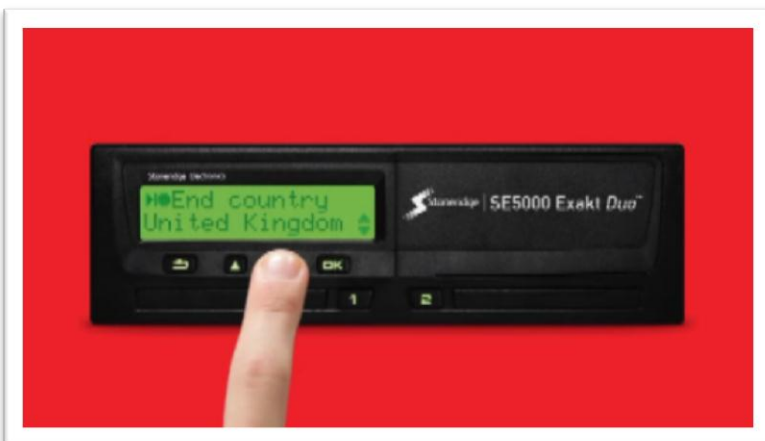

Select and confirm the country you are currently in.



After confirming, the tray will open.



Push the card up through the opening underneath the tray, or gently push down the tray until the card pops out.