


HOW TO CHANGE A PAPER ROLL



To change a paper roll, push in the top of the printer cassette so the lower edge comes out.



Holding the lower edge, pull out the cassette.

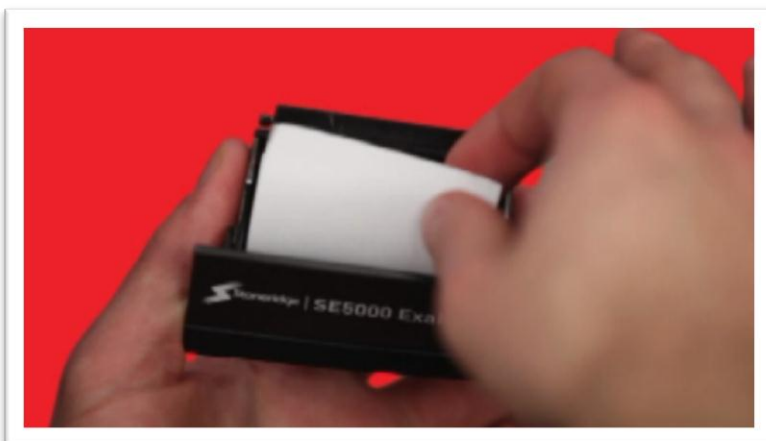

Replace the existing roll with a new one, making sure a length of paper wraps around the bottom of the cassette.



Finally, slot the cassette back into the device. Simple as that!