

## READING A PRINTOUT



This is how to read a driver card printout from an SE5000 Exakt Duo.




The first section deals with driver and vehicle information, such as the cardholder's full name and the vehicle registration.




Next is an overview of the tachograph itself, including the name of the workshop responsible for the last calibration and the date it was calibrated.



The third section has a few facts and stats about the driver's journey: distance travelled, length of time taken and a summary of all driving activities.

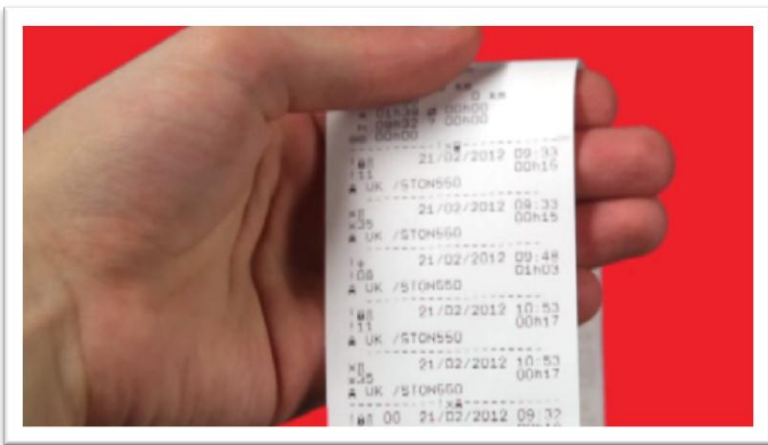

After this is a list of the last five faults from the driver card and vehicle unit.

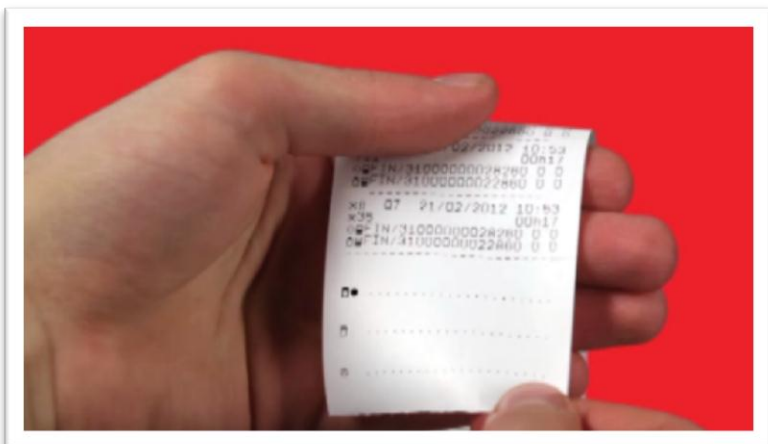

Finally, there is space for the name of the control location, the controller's signature and the driver's signature. And that's it!